



## CTD-200 Card Gate Adjustment

3. Pull the gate-adjusting knob out and turn while observing the gate. The gate should be just barely above the card that you have inserted. Push the gate-adjusting knob back in. (Figure 3)

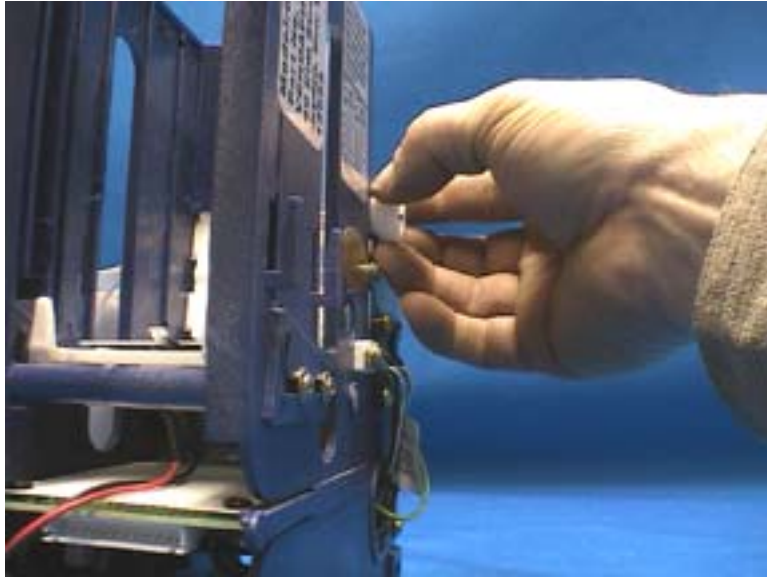


Figure 3

4. Place a second card into the card hopper and try to slide under the gate along with the first card. (Figure 4) If you can slide two (2) cards under the gate, then the gate needs adjusted so it will only allow one (1) card under at a time.



Figure 4

5. After adjustments have been made, tighten the gate lock down screw. Power your machine up and dispense cards. The cards should dispense one at a time.
6. Repeat as necessary