

To assemble this pedestal stand, the following tools will be needed:

3/4" and 7/16" Combination wrenches or Socket wrenches of equivalent sizes.

Before starting the installation, make sure all power cords and harnesses are unplugged to prevent short circuits or personal injury.

1. Unlock and open the enclosure. Remove the cashbox if necessary. Rest the enclosure hinged side down on a clean work surface. Take care not to scratch the paint.

2. Locate the long tube bolt (100131-002) and one of the 9/16" ID flat washers (100162). Slide the washer over the bolt until it makes contact with the head. Locate the large hole in the center of the enclosure base. Insert the threaded end of the tube bolt through the hole from the inside of the enclosure.*

3. Locate the black finished tube (200084-002), the 5-legged pedestal base (200085), the 1/2" lockwasher (100341-001) and 1/2-13 nut (100167). Slide the tube over the bolt until it is up against the base of the enclosure.


4. Support the loose ends of the screw and tube with one hand, and slide the pedestal base over the screw and onto the tube. The tube fits into the indentation in the top of the 5-legged base.

5. Put the lockwasher on the bolt, slide it into the cavity in the bottom of the base and secure the assembly finger tight with the 1/2-13 nut. Align the parts for good fit and tighten with a wrench so that the lockwasher is fully compressed.

6. Reinstall the cashbox, if necessary. Set the unit upright on the floor, and check for stability, making whatever adjustments are necessary.

7. Loop the cable around a fixed object and secure both ends of the cable into the "U" clamp. Assemble both ends of the cable as shown in the illustration.

8. Please refer to the Coin-Ops Operator/ Installation Instructions Manual for proper set up and test procedures.

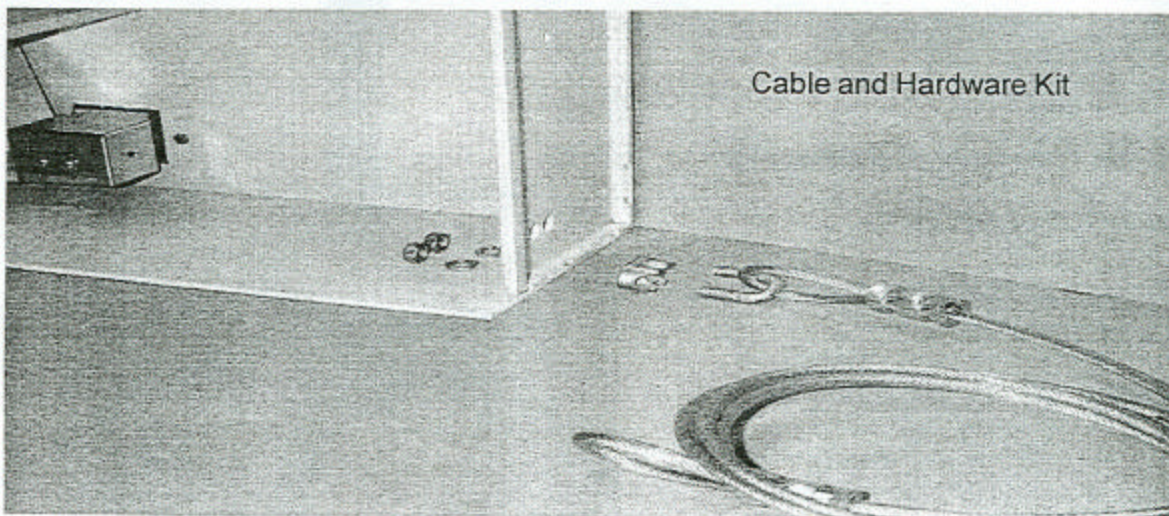

***NOTE:**

For some styles of Encoder/ Dispenser Enclosures, refer to Assembly option B illustration. Locate the "U" shaped bracket on the outside bottom of the enclosure and slide the head of the "tube bolt" with a washer into the "U" of the bracket. Continue installation as instructed.